## **Operation Guide for DesignEditor software**

Run the EditTool and click "Enter System" to start the Control UI designing:



After enter to the system, it will be showing as the below:



To start the project, Users could have 2 options:

Option 1: Click "New" to start a new project, choose a name, project path, click "OK"

📀 EditTool					
File Edit Upload hel					
	# # T # L		60		
Proiect View					
	📀 Create Project			?	×
	project name project dir	Demo \$/Rocky Wong/Desktop default template ok cancel	Browse		

Then right lick on the Demo project to start a new file

♦ EditTool File Edit Upload help Tool $\square$ $\square$ $\square$ $\square$ $\square$ $\square$ $\square$ $\square$ $\square$ $\square$	♦ Editori The Edit Uphad help Tool       Choice     Choice     Choice     Choice     Choice       Predet View     Choice     Choice     Choice     Choice
Prolect View Demc New File Close Project	© Crrate File ? × filename: [page] width: [1020 Height: [1080

Can click and customize the background image or color from the right side:

EditTool			- 0 X
File Edit Upload	elp Toat		
	キョ戸を上 啓如 □ < > □ & ▶		
Project View	paget jion 🛛	All Control	Property
V Domo	talg      telen     telen	Sarate Group Card Batton Card Batton Card Batton Card Batton See Card Batton Walk Woget See List See List See List See List See List See List See List See List See List Card Batton Card	hours

**Text Control** for adding the text, firstly will need to click Text Control, then use the mouse drag and drop on the middle page, then can do the text settings, including color, size, etc:



Switch Page: Add a Switch Page if there're more than 1 page, can add a Switch Page button:



**Homepage** button is for users to get back to the homepage when use the DVSTool software/APPs.

**Cmd button** and **more cmd button** is for using the RS232/485, RELAY, I/O those control ports from the Transmitters or receivers



Wall Widget is for setting up the Video Wall screens



Scene List for showing the presets list, users can click the preset to review and recall

Demo	Video Wall Control json 🛛 page					 			All Control	Property	
pag			Meet	ing Room 2x2 VV	w				Text Control Switch Page	name	SceneLis
Vide			1111						Homepage	text	scene lis
) pag							and the second sec		🗅 Cmd Button	left	1572
							100		More Cmd Bu Wall Widget		124
									Scene List		
									Save Scene	width	308
	source_1							cene_1	Save Plan	height	760
									Call PreLayou	directi	vertical
									Wall Buttons	default	#ff56aaf
									🗀 Open All Butt	backg	
	source_2							cese_2	Clear Wall	color default	emm
									Matrix Page	backg	+11111
									Matrix Num	color	
									🗀 Grid Setting	active backg	amm
	source_3							cala 7	All Grids	color	
	southe's								Audio Volumi	default	
									Audio Mode	backg image	
									Source	active	-
								cene_4	🗅 Video Stream	backg	
	source_4								Search Source	image	
									Source droup	default color of	##00000
										prev	
								cene_5			amm
	source_5						prev	next		color of prev	
pre	w next Sw	itch all Clear wall	Clear all	Full Screen		All Grids		-			emm
							Save	Plan		backg	
Grou	p Preview									color	_
										active	





## Save Plan is for recycling the saved presets which can be selected from DVStool software/apps

All Scene									the second se			
					lan Scenes						Fulls	screen
All	No.	Name		F	All No.	Name	Time(s)				T GIT S	0010011
	1	Full screen										
	3	Multiview							11.			
	4	2-windows	Ad	d					all de cartos	- 0 0		
	5	Scene_5	Dele						Ph			
											Mui	tiview
									Kan in Ma			
									100			
	Name Plan 1									*		
1 Time(s)									boyt ALL	Vint		
rune(s) [	10		Sar	ve					0 0 0000 0000	RCDH HOTH	2-wi	ndows
Plans					s of the selected	plan			· · · · · · · · · · · · · · · · · · ·	-		
No.	Name	Action		No.	Name	Time(s)			a			
0	Plan_0			1	Full scre				9 UN	/ 0		
		Juit		3	Multiview				× # 0 0 0 001	9631 D		
				5	Scene_5							
				5	Scene_5	10			7 470 man		Sce	ene 5
							-		1			
									5 -	4 10 08		
									Part and Artes			
									-21			
			Del	ete								
Clear	wall	Clear all	Full Scree	en		2x2		2x2	All Grids		Prev	Next
											Save	Plan



**Option 2:** Can open an exit project, the other settings will be just the same as the option 1.

After created the project, next step will need to upload the project to the DVSTool control devices, but before uploading, we will have to Open Server on the DVSTool software/APPs. Open Server steps:

Step 1: Click and run the DVSTool, the default user name is admin, password is 123456:



Step 2: click OK to login and then click the setting icon----Data---Open server

		9
System settings	7 ×	
Device Source Output Place User IPC Data	Status System Log Select NIC 192,168,1,17 ~	
Download Managerment Local IP: 192.108.1.17 Transmission Information	Upload Managerment Remote IP: Transmission Information	
listen to 8861 success, waiting for uploading		
Close Server	Upload Date Iroad Configurati	
Maximize	Exit	

Then we can upload the created project from the Designer software, the remote IP will be the destination devices, such as the above we have the example is using 192.169.1.17, then we will just enter this IP address here to upload:

ie Edi Upleed help Teol C C C C C + = = I I + L ≌ II C ← → C C ►			
Protect Mew Page Agen  Protect Mew  Protect Mew Page Agen  Protect Mew Page Agen  Protect M	4K30 AVoverIP Control	Durate	All Control Property Text Control Switch Page
B pag Preview Group wal_1	val.2 val.3 val.4 val.5	Presets Save Plan	Homepage     Gmd Button     More Cmd Bu     Wall Widget
Eure 1		scre.1	<ul> <li>Scene (sit</li> <li>Swe Scene</li> <li>Swe Plan</li> <li>Sky Plan</li> <li>Gal Prelayou</li> <li>Gal Prelayou</li> <li>Gal Prelayou</li> <li>Gal Prelayou</li> <li>Gal Wall</li> <li>Coar Wall</li> <li>Coar Wall</li> </ul>
source_2 Source_3 Source_3		5000 J	Matrix Page Matrix Num Grid Setting Audio Audio Audio Audio Audio Node
		sere 4	<ul> <li>Source</li> <li>Video Stream</li> <li>Sourch Source</li> <li>Source Group</li> </ul>
tores 2 provement	jeen servel kead cont	reara_5 provend	
DVSTool Data wii	ndow: server opened		
Device Source Output Place User IPC Data	Status System Log Select NIC 192.168.1.17 v	<sup>***</sup> Designer Uploa	d Window <sup>?</sup> ×
Download Managerment	Brenzik ID	wnload setting upload	Setting 9  P: 192.168.1.17
Transmission information	Transmission Information	cal IP: 192.188.1.17 remoti ansfer info transf	
		pen serve	ligad conf
Close Server	Upload Data load Configurati		NOBU COM
Maximize	Evit		
Maannize	LAN		

After uploaded the project successfully, it will be showing the success log:

Device Source Output Place User IPC Data Status System Log Calvasting 102,169,1.17	System s	ettings										?	×		
Download Managerment     Upload Managerment     upload Managerment       Local P: 123 108.1 17     Renote P:	Device	Source	Output	Place	User	IPC	Data	Status	System	Log	Select NIC	192.168.1.17	~		? ×
Close Server Upload Data load Configurat	Local IP Transmi	192.168.1.17 ision Informa from 192.10	tion					Remote IP:						download setting local IP: 192.168.1.17	remote IP: 192.168.1.17 transfer into he connection was successful
			[	Close Server	Ð				1	Upload Dat	ta load Configura	9			Head cont
							Maximize	Exit					10		

So for the Apps DVSTool, will also need to do the same as above steps: open server from the DVSTool, and then upload the project either from Designer or can upload from the other devices' DVSTool as below:

vice Source Output Place User IPC Data	Status System Log Select NIC 192.168.1.17 ~		
wnload Managerment	Upload Managerment		
al IP: 192.168.1.17	Remote IP: 192.168.1.20		select local network card memory -
ar IP: 192.168.1.17 nemission Information	Transmission Information	local ip. 192 168 1 20	ation resugnment
Institution Information	192,160.1.20: Failed to connect	transmission information	remote ip Viarismission information
	192.188.120 The connection is successful 192.188.120 The transmission succeeds 192.188.120 The connection is successful 192.188.120 The transmission successful	Come from 192, 268,1.97 is connect. Upload success 1	
Open Server	Uplead Data Foad Configurat	30000	
1100011L	Exit	Anne i se a constatutore and	
stem settings vice Source Output Place User IPC D		X 1450 Set April	♥30% €)
	Data Status System Log Select NIC 192.168.1.17	data	select local network card manager
Download Managerment	Upload Managerment	Council Antiplanet	glast medicate
	Upload Managerment	local (p. 192, 166, 1, 10	remote lo:
Oownload Managerment	Upload Managerment Remote IP: 192.168.1.10	local p. 192768.1.10 tosarisson information	glass messager and
ownload Managerment	Upload Managerment	local (p. 192, 166, 1, 10	remote ip:

After the above uploading successfully, then can use the DVStool software and APPs start controlling:



PC DVSTool Software

iPad DVSTool APP

Android DVSTool APP